




ACOPLAMENTOS ELÁSTICOS **POR** **Compensador de segurança**
ACOPLAMIENTOS ELÁSTICOS **ESP** **Compensador de seguridad**
FLEX COUPLINGS **ENG** **Torsionally safety clutch**

ASE

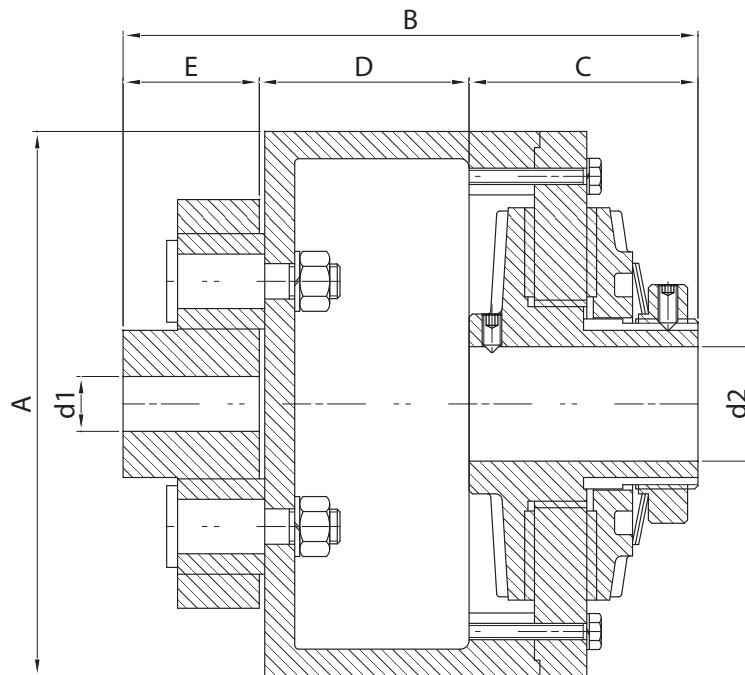

Tamaño/ Tamaño/ size	Torque max (Nm)	Torque min (Nm)	d1 max	d2 max	A	D	E	C	B
125-2/1	20	5	28	25	130	46	40	53	139
125-2/2	30	8	28	25	130	46	40	53	139
130-4/1	40	10	35	35	150	45	50	58	153
130-4/2	60	15	35	35	150	45	50	58	153
140-8/2	80	20	50	35	170	44	70	67	181
140-8/3	120	30	50	35	170	44	70	67	181
145-16/2	160	40	60	35	185	43	80	70	193
145-16/3	250	63	60	35	185	43	80	70	193
150-32/2	320	80	65	42	200	52	85	82	219
150-32/3	500	125	65	42	200	52	85	82	219
160-63/2	630	158	85	50	240	53	95	97	245
160-63/3	1000	250	85	50	240	53	95	97	245
170-125/2	1250	313	115	60	300	53	110	118	281
170-125/3	2000	500	115	60	300	53	110	118	281
180-250/2	2500	625	150	70	350	53	130	131	314
180-250/3	4000	1000	150	70	350	53	130	131	314